




Sony MDS-E11



To Record to MiniDisc

Notes on Recording Level

The input level of the MiniDisc is preset to comply with VOA recording standards. To turn up the recording level on the MiniDisc, increase the level on the Ward-Beck QSP6 knob of the input device (example: if Dalet is your source turn up the SOD knob). **Do not alter the rec level knob.** This will confuse other users. Audio levels should be set as listed above for agency consistency.

1. Press Record  on the MiniDisc unit. This will put the unit in record or standby monitoring mode. From here you will be able to set recording level (see Recording Level Note above).
2. When you are ready to record to the MiniDisc press Play  on the MiniDisc unit.
3. To stop recording press Stop  on the MiniDisc unit.


To Erase a Track

Notes on Erasing Tracks

Erasing a track is as simple as selecting the track to be deleted and deleting it.

When a track is erased, the track numbers are reassigned (example: track 2 is erased – what was track 3 becomes track 2 and all subsequent tracks slide back one number).

1. Press **NO/EDIT** while the recorder is stopped, playing, or paused. Edit Menu appears in the display.
2. Turn **AMS** knob until Erase? appears in the display.
3. Press the **AMS** knob or the **YES** button.
4. Turn the **AMS** knob until the desired track to be erased is displayed.
5. Press the **AMS** knob or the **YES** button. Complete! appears briefly in the display then disappears.

To cancel this operation at anytime before completion, press the **NO/EDIT** or press Stop .


If Erase?? appears in the display, the track was recorded on edited on another MD unit. If this appears press **YES** to erase the track.

To Erase Entire MiniDisc

Notes on Erasing MiniDiscs

These steps will erase the entire MiniDisc including the track names.

1. Press **NO/EDIT** while the recorder is stopped. Edit Menu appears in the display.
2. Turn the **AMS** knob until All Erase? appears in the display.
3. Press the **AMS** knob or **YES**. All Erase?? appears in the display.
4. Press the **AMS** knob or the **YES** button. Complete! appears briefly in the display then disappears.

To cancel this operation at anytime before completion, press the **NO/EDIT** or press Stop .

Sony MDS-E11



To Name a Track

Notes on Naming Tracks

1700 characters can be stored for all names on the MiniDisc.

Do not name tracks while they are recording or the name may be discarded if the recording ends before you are done naming the track.

1. Press the **NO/EDIT** button when the recorder is stopped, paused or playing. Edit Menu appears briefly in the display.
2. If necessary, turn the **AMS** knob until Name IN? appears in the display.
3. Press the **AMS** knob or the **YES** button.
4. Turn the **AMS** knob until the desired track number flashes in the display as follows: Nm In Tr2. (This will name track 2).
5. Press the **AMS** knob or the **YES** button.
6. Turn the **AMS** knob to cycle the character type. The character type cycles from:
 - Uppercase Letters
 - Lowercase Letters
 - Numbers
 - Punctuation & Symbols
7. Press the **▶▶** for a space. Press **◀◀** to backspace. Press the **NO/EDIT** button to erase the character at the current cursor position.
8. Press the **AMS** knob or **▶▶** to advance to the next character.
9. Press **YES** when finished.

To Name a MiniDisc

1. Press the **NO/EDIT** button when the recorder is stopped, paused or playing. Edit Menu appears briefly in the display.
2. If necessary, turn the **AMS** knob until Name in? appears in the display.
3. Press the **AMS** knob or the **YES** button.
4. If necessary, turn the **AMS** knob until Nm In Disc flashes in the display.
5. Press the **AMS** knob or the **YES** button.
6. Turn the **AMS** knob to cycle the character type. The character type cycles from:
 - Uppercase Letters
 - Lowercase Letters
 - Numbers
 - Punctuation & Symbols
7. Press the **▶▶** for a space. Press **◀◀** to backspace. Press the **NO/EDIT** button to erase the character at the current cursor position.
8. Press the **AMS** knob or **▶▶** to advance to the next character.
9. Press **YES** when finished.