

## Tip 4-To Delete a Track from a Minidisk

With the minidisk inserted, do the following steps:

1. Select the track to delete by **turning** the silver selection knob. The display of the MD unit should show the desired track number to be deleted.



2. Press the button. The display of the MD unit should read

Edit Mode

3. **Press** the silver selection knob. The display of the MD unit should read

Track Erase?

4. **Press** the silver selection knob. The display of the MD unit should read

Track OK?



5. Press the button. The display of the MD unit will momentarily flash

Complete! followed by Edit Mode

After completion of the above steps, the unit will be revert to Edit Mode. Refer to Tip 5 to learn how to exit the Edit Mode.