

Tip 9 - Moving Tracks On The Denon DN-M991R MiniDisc Unit

1. Select the track to move by **turning** the silver selection knob. The display of the MD unit should show the desired track number to be moved.



2. Press the button. The display of the MD unit should read **Edit Mode**.

3. **Press** the silver selection knob. The display of the MD unit should read **Track Erase?**

4. **Turn** the silver selection knob until the display reads **Move?**

5. **Press** the silver selection knob to select this editing function. The display of the MD changes to **Move 03→03**. The blinking number is the *track you wish to move*.

6. **Turn** the silver selection knob to change the *track you wish to move*. **Press** the silver selection knob to select this track.

7. The display of the MD changes to **Move 03→03**. The blinking number is the *destination track number for the track you wish to move*.

8. **Turn** the silver selection knob to change the *destination track number for the track you wish to move*.



9. Press the button to finish the operation. The display of the MD reads **Complete!** and returns to the **Edit Mode**.